

Drawer and Wardrobe Safe



Set Password:


- ① Press and release the **RESET** button;
- ② Enter the factory set password **1234#** (if setting up for the first time) or your current password (if it has already been changed).
- ③ When the **GREEN** light is on, enter the new password twice (**4-6 digits**), pressing # after each entry.
- ④ If the **GREEN** light is on, the password has been set successfully. If the **RED** light is on, the password setup has failed—please try again.

Set Fingerprint:

- ① Press and release the **RESET** button;
- ② Enter the factory set password **1234#** (if setting up for the first time) or your current password (if it has already been changed).
- ③ When the **GREEN** light is on, place your finger on the fingerprint button four times.
- ④ If the **GREEN** light is on, the password has been set successfully. If the **RED** light is on, the password setup has failed—please try again.

Clear fingerprint and password:

Press and hold the **RESET** button for at least 6 seconds (located behind the fingerprint sensor on the front wall—see diagram below). Release the button after two short beeps. The system will then reset, indicated by a long beep and the green light flashing three times. This confirms that the system has been restored to factory settings.

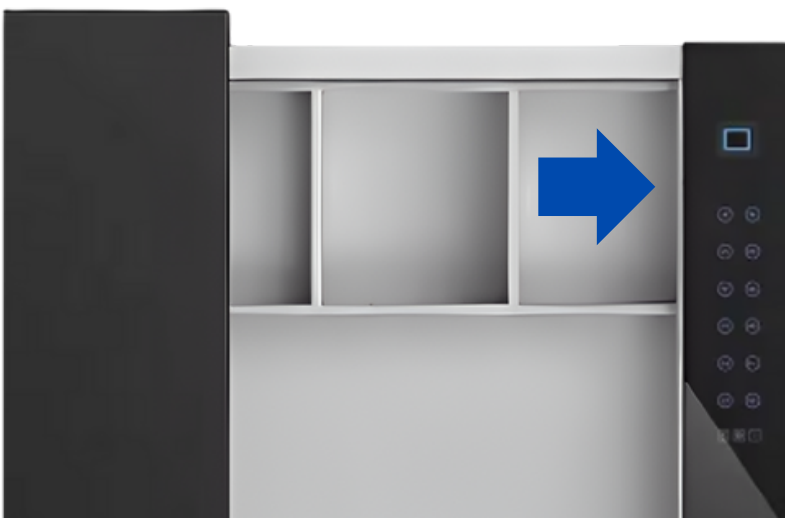

Factory Set Password: 1234#

**Setting
Video**

